


INSTALLATION INSTRUCTIONS FOR NO. 5000-12, 12-VOLT UTILITY OUTLET

IMPORTANT: Must have at least 1-5/8" depth behind face plate.

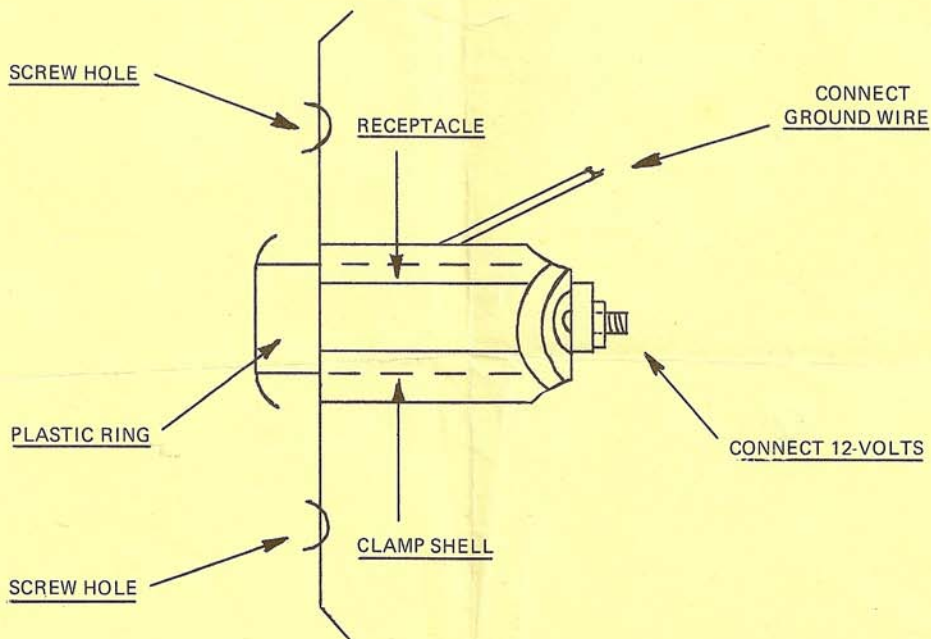

1. SELECT SITE FOR 12-VOLT UTILITY OUTLET. THERE MUST BE 1-5/8" DEPTH AVAILABLE BEHIND DESIRED MOUNTING LOCATION.
2. CUT HOLE APPROXIMATELY 1-1/8 INCHES IN DIAMETER.
3. RUN 12-VOLT POWER AND GROUND WIRE TO THIS LOCATION.
4. UNSCREW CLAMP SHELL AND PUT RECEPTACLE THROUGH HOLE IN FACE PLATE. THEN SCREW CLAMP SHELL BACK ON.
5. ATTACH 12-VOLT POWER AND GROUND WIRE AS SHOWN IN DIAGRAM.
6. FASTEN FACE PLATE TO WALL THROUGH SCREW HOLES.